Keurig K-Cup Brewer For CFE28 and CYE22 Models

Quick Start Guide

257C2150P001 31-49087-1 02-16 GE



Load Keurig K-Cup into brewer.



Drop K-Cup into brewer and press down firmly.



▲ CAUTION Cut/Puncture Hazard




- There are two sharp needles located inside the K-Cup brewer. To avoid risk of injury, do not put your fingers inside the brewer. Use caution when cleaning.
- Keep the K-Cup brewer out of the reach of children, as they may be injured in using the K-Cup brewer incorrectly.



Two Ways To Brew:


- 1. Press Hot Water. Select K-Cup Pod.
 OR
- 2. Slide the brewer into the rails.

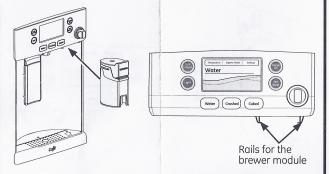



Pick your size.


NOTICE: If using a powdered beverage, select the Cocoa setting.

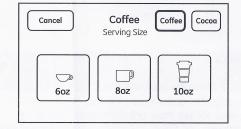



Place your mug under the brewer (on the tray mug icon and under the red brew spout).


NOTICE: Make sure the mug being used is large enough for the size selected.

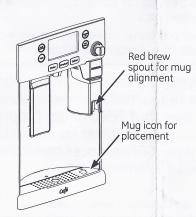



Rotate the hot water knob counterclockwise and push in, to brew and dispense.

NOTICE: Press any button or dispenser paddle, or open either the left or right door to cancel dispense.

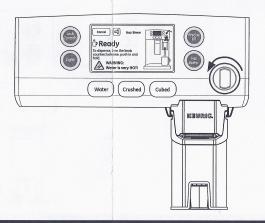

▲ WARNING Scalding Hazard



- The water coming from the dispenser is very hot and can cause scalds or burns. Read all warnings in the Owner's Manual that was included with your refrigerator prior to use.
- Do not permit children to use the brewer.
- Always use a container that is suitable for hot liquids (ceramic, foam, etc.)
- Do not brew into a mug made of glass. Doing so may cause the glass to crack or break.

Does your unit have a WiFi password on the label? **You can connect!** Download the App "GE Kitchen" and follow the instructions.

Visit www.GEAppliances.com/connect for more information.*

* For US and US Territories only.